



Visualisation; Diagnostics

Easy to Configure

Programming IEC 61131-3

Rapid Installation

## PNOZ s11

► Safety relays

**PILZ**  
THE SPIRIT OF SAFETY

This document is the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Source code from third-party manufacturers or open source software has been used for some components. The relevant licence information is available on the Internet on the Pilz homepage.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital

|   |           |
|---|-----------|
| <b>Introduction</b>                         | <b>5</b>  |
| Validity of documentation                   | 5         |
| Using the documentation                     | 5         |
| Definition of symbols                       | 5         |
| <b>Safety</b>                               | <b>6</b>  |
| Intended use                                | 6         |
| Safety regulations                          | 6         |
| Safety assessment                           | 6         |
| Use of qualified personnel                  | 7         |
| Warranty and liability                      | 7         |
| Disposal                                    | 7         |
| For your safety                             | 7         |
| <b>Unit features</b>                        | <b>8</b>  |
| <b>Safety features</b>                      | <b>8</b>  |
| <b>Block diagram/terminal configuration</b> | <b>8</b>  |
| <b>Function description</b>                 | <b>9</b>  |
| Timing diagram                              | 9         |
| <b>Installation</b>                         | <b>9</b>  |
| <b>Wiring</b>                               | <b>10</b> |
| <b>Preparing for operation</b>              | <b>10</b> |
| <b>Run</b>                                  | <b>11</b> |
| Status indicators                           | 12        |
| Error indicators                            | 12        |
| <b>Faults - malfunctions</b>                | <b>12</b> |
| <b>Dimensions in mm</b>                     | <b>12</b> |
| <b>Technical details</b>                    | <b>13</b> |
| Safety characteristic data                  | 17        |
| <b>Supplementary data</b>                   | <b>17</b> |
| Service life graph                          | 18        |
| Permitted operating height                  | 19        |

|                                     |           |
|-------------------------------------|-----------|
| <b>Remove plug-in terminals</b>     | <b>20</b> |
| <b>Order reference</b>              | <b>20</b> |
| <b>EC declaration of conformity</b> | <b>21</b> |

## Introduction

### Validity of documentation

This documentation is valid for the product PNOZ s11. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

### Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

### Definition of symbols

Information that is particularly important is identified as follows:



#### **DANGER!**

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



#### **WARNING!**

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



#### **CAUTION!**

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



#### **NOTICE**

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.


**INFORMATION**

This gives advice on applications and provides information on special features.


## Safety

### Intended use

The unit meets the requirements of EN 60947-5-1, EN 60204-1 and VDE 0113-1. The contact expansion module is used to increase the number of instantaneous safety contacts available on a base unit. Base units are all safety relays with feedback loop monitoring.

The max. achievable safety level depends on the base unit. The expansion module may not exceed this. The safety-related characteristic values stated under [safety-related characteristic data](#) [ 17] can only be achieved if the base unit also exhibits these values.

The following is deemed improper use in particular

- ▶ Any component, technical or electrical modification to the product,
- ▶ Use of the product outside the areas described in this manual,
- ▶ Use of the product outside the technical details (see [Technical details](#) [ 13]).

**NOTICE****EMC-compliant electrical installation**

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

### Safety regulations

#### Safety assessment

Before using a device it is necessary to perform a safety assessment in accordance with the Machinery Directive.

Functional safety is guaranteed for the product as a single component. However, this does not guarantee the functional safety of the overall plant/machine. In order to achieve the required safety level for the overall plant/machine, define the safety requirements for the plant/machine and then define how these must be implemented from a technical and organisational standpoint.

### Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. To be able to inspect, assess and operate devices, systems and machines, the person has to be informed of the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention,
- ▶ Have read and understood the information provided in the section entitled Safety
- ▶ Have a good knowledge of the generic and specialist standards applicable to the specific application.

### Warranty and liability

All claims to warranty and liability will be rendered invalid if

- ▶ The product was used contrary to the purpose for which it is intended,
- ▶ Damage can be attributed to not having followed the guidelines in the manual,
- ▶ Operating personnel are not suitably qualified,
- ▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

### Disposal

- ▶ In safety-related applications, please comply with the mission time  $T_M$  in the safety-related characteristic data.
- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

### For your safety

The unit meets all the necessary conditions for safe operation. However, please note the following:

- ▶ Note for overvoltage category III: If voltages higher than low voltage (>50 VAC or >120 VDC) are present on the unit, connected control elements and sensors must have a rated insulation voltage of at least 250 V.

## Unit features


- ▶ Positive-guided relay outputs:
  - 8 safety contacts (N/O), instantaneous
  - 1 auxiliary contact (N/C), instantaneous
- ▶ LED for:
  - Input status, channel 1
  - Input status, channel 2
  - Switch status of the safety contacts
  - Fault
- ▶ Plug-in connection terminals (either spring-loaded terminal or screw terminal)
- ▶ See order reference for unit types

## Safety features

The unit meets the following safety requirements:

- ▶ The contact expander module expands an existing circuit. As the output relays are monitored via the base unit's feedback loop, the safety functions on the existing circuit are transferred to the contact expander module.
- ▶ The safety function remains effective in the case of a component failure.
- ▶ Earth fault in the feedback loop:  
Detected, depending on the base unit that is used.
- ▶ Earth fault in the input circuit:  
The output relays de-energise and the safety contacts open.

## Block diagram/terminal configuration

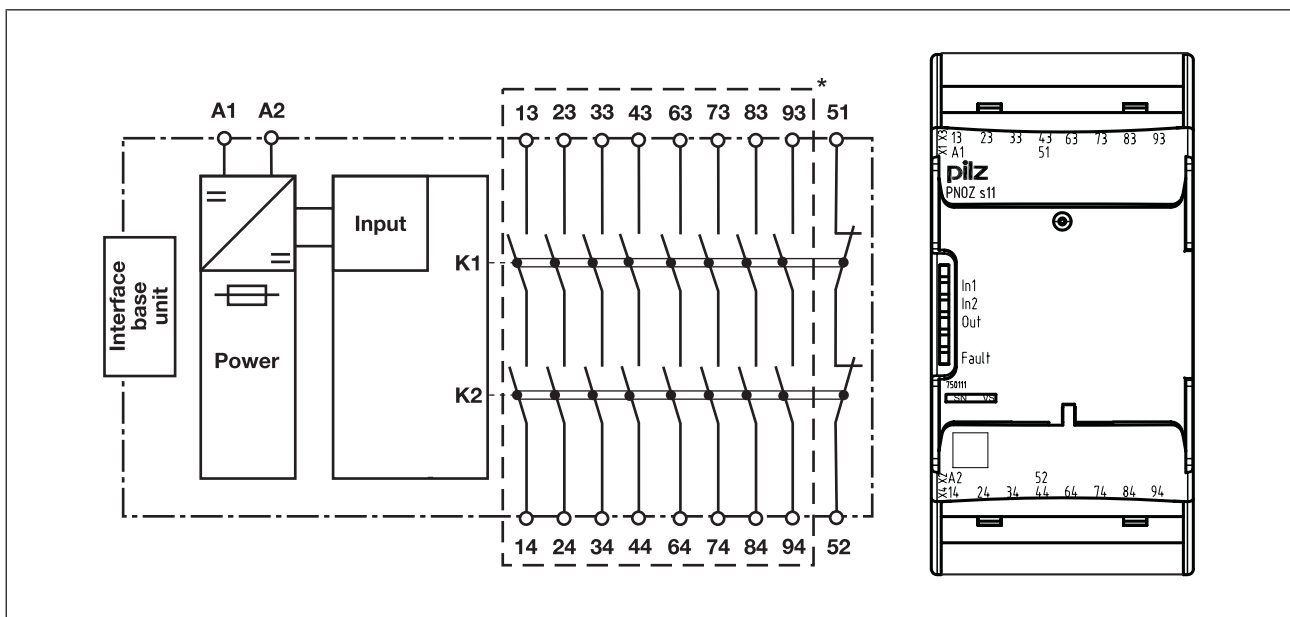

\*Safe separation from non-marked area in accordance with EN 60947-1, 6 kV, basic insulation between all safety contacts.



## Function description


with PNOZsigma base unit:

- ▶ Dual-channel operation via PNOZsigma connector

without PNOZsigma base unit:

- ▶ Single-channel operation: one input circuit affects the output relays

## Timing diagram

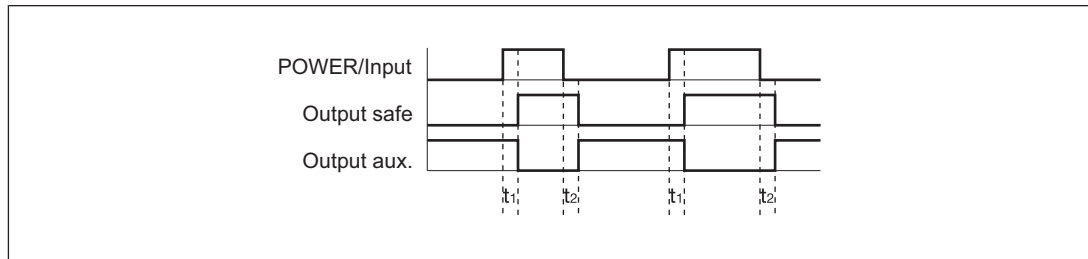

## Legend

- ▶ POWER/Input: Supply voltage/input circuit
- ▶ Output safe: Safety contacts
- ▶ Output aux.: Auxiliary contacts
- ▶  $t_1$ : Switch-on delay
- ▶  $t_2$ : Delay-on de-energisation

## Installation

### Install contact expansion module without base unit:

- ▶ Ensure that the plug terminator is inserted at the side of the unit.

### Connect base unit and PNOZsigma contact expansion module:

- ▶ Remove the plug terminator at the side of the base unit and at the contact expander module
- ▶ Connect the base unit and the contact expansion module using the connector supplied, before mounting the units to the DIN rail.

### Control cabinet installation

- ▶ The safety relay should be installed in a control cabinet with a protection type of at least IP54.
- ▶ Use the notch on the rear of the unit to attach it to a DIN rail (35 mm).
- ▶ When installed vertically: Secure the unit by using a fixing element (e.g. retaining bracket or end angle).
- ▶ Push the unit upwards or downwards before lifting it from the DIN rail.

## Wiring

Please note:

- ▶ Information given in the "Technical details [13]" must be followed.
- ▶ Outputs 13-14, 23-24, 33-34, 43-44, 63-64, 73-74, 83-84, 93-94 are safety contacts; output 51-52 is an auxiliary contact (e.g. for display).
- ▶ Auxiliary contact 51-52 should **not** be used for safety circuits!
- ▶ To prevent contact welding, a fuse should be connected before the output contacts (see Technical details [13]).
- ▶ Calculation of the max. cable length  $l_{max}$  in the input circuit:

$$l_{max} = \frac{R_{lmax}}{R_l / km}$$





$R_{lmax}$  = max. overall cable resistance (see Technical details [13])

$R_l / km$  = cable resistance/km

- ▶ Use copper wire that can withstand 60/75 °C.
- ▶ Sufficient fuse protection must be provided on all output contacts with capacitive and inductive loads.
- ▶ Ensure the wiring and EMC requirements of EN 60204-1 are met.
- ▶ The power supply must comply with the regulations for extra low voltages with protective electrical separation (SELV, PELV) in accordance with VDE 0100, Part 410.

## Preparing for operation

| Supply voltage  | AC             | DC           |
|---|----------------|--------------|
|   |                |              |
| Input circuit   | Single-channel | Dual-channel |
| Base unit:<br>Safety relay PNOZ X   |                |              |
| Base unit:<br>Safety relay PNOZelog<br>Driven via semiconductor outputs<br>(24 VDC) |                |              |
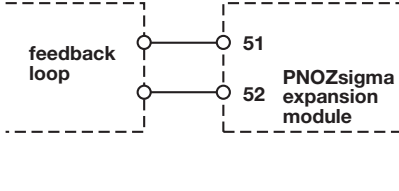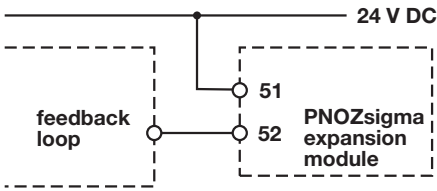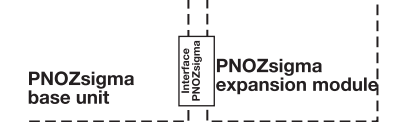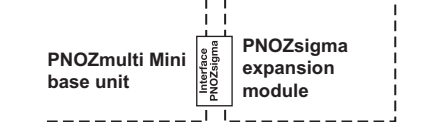
| Feedback loop  | Base unit: Safety relay PNOZ X  | Base unit: Safety relay PNOZelog   |
|--|---|--|
| <p>The inputs that evaluate the feedback loop will depend on the base unit and application</p> |  |  |
| Connection to PNOZsigma base unit/PNOZmulti Mini base unit                                     | Base unit: Safety relay PNOZ-sigma  | Base unit: Small control system PNOZmulti Mini                                     |
| <p>The feedback loop is connected and evaluated via the connector</p>                          |  |  |



**INFORMATION**

If a base unit and a contact expansion module are linked via the connector, no additional wiring is necessary.  
Do not connect A1 to the contact expansion module!

**Run**

When the relay outputs are switched on, the mechanical contact on the relay cannot be tested automatically. Depending on the operational environment, measures to detect the non-opening of switching elements may be required under some circumstances.

When the product is used in accordance with the European Machinery Directive, a check must be carried out to ensure that the safety contacts on the relay outputs open correctly. Open the safety contacts (switch off output) and start the device again, so that the internal diagnostics can check that the safety contacts open correctly

- ▶ for SIL CL 3/PL e at least 1x per month
- ▶ for SIL CL 2/PL d at least 1x per year



**NOTICE**

The safety function should be checked after initial commissioning and each time the plant/machine is changed. The safety functions may only be checked by qualified personnel.

LEDs indicate the status and errors during operation:



LED on

### Status indicators

- ☉ **IN1**  
Channel 1 actuated.
- ☉ **IN2**  
Channel 2 actuated.
- ☉ **IN1, IN2, OUT**  
Safety contacts are closed.

### Error indicators


- ☉ **FAULT**  
Diagnostics: Plug terminator not connected
  - ▶ Remedy: Insert plug terminator, switch supply voltage off and then on again.

### Faults - malfunctions

- ▶ Contact malfunctions: If the contacts have welded, reactivation will not be possible after the input circuit has opened.

### Dimensions in mm

\*with spring-loaded terminals

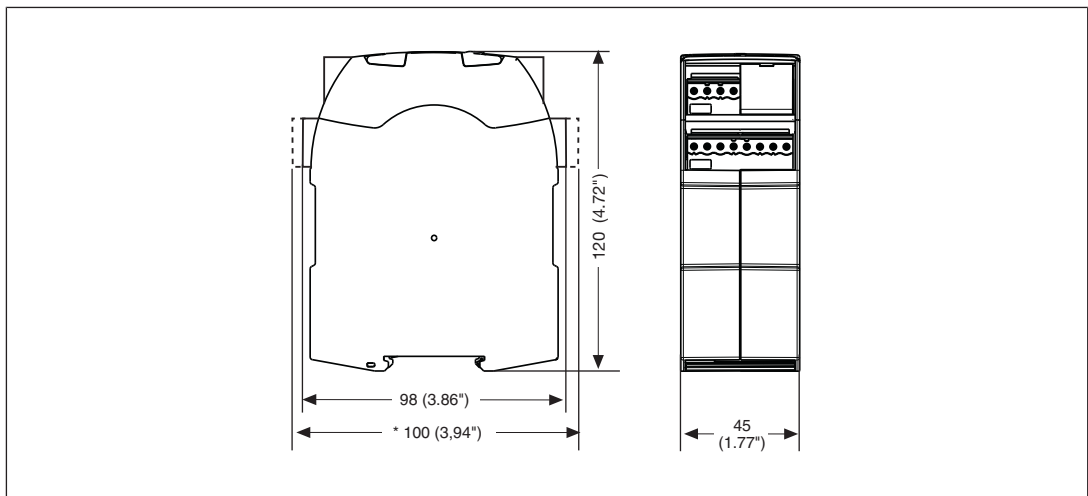

## Technical details

| <b>General</b>                                   | <b>750111</b>                              | <b>751111</b>                              |
|--|--|--|
| Approvals  | CCC, CE, EAC (Eurasian), TÜV, cULus Listed | CCC, CE, EAC (Eurasian), TÜV, cULus Listed |
| <b>Electrical data</b>                           | <b>750111</b>                              | <b>751111</b>                              |
| Supply voltage                                   |  |  |
| Voltage  | <b>24 V</b>                                | <b>24 V</b>                                |
| Kind   | <b>DC</b>                                  | <b>DC</b>                                  |
| Voltage tolerance                                | <b>-20 %/+20 %</b>                         | <b>-20 %/+20 %</b>                         |
| Output of external power supply (DC)             | <b>3 W</b>                                 | <b>3 W</b>                                 |
| Residual ripple DC                               | <b>20 %</b>                                | <b>20 %</b>                                |
| Duty cycle                                       | <b>100 %</b>                               | <b>100 %</b>                               |
| <b>Inputs</b>                                    | <b>750111</b>                              | <b>751111</b>                              |
| Number   | <b>1</b>                                   | <b>1</b>                                   |
| Voltage at                                       |  |  |
| Input circuit DC                                 | <b>24 V</b>                                | <b>24 V</b>                                |
| Current at                                       |  |  |
| Input circuit DC                                 | <b>95 mA</b>                               | <b>95 mA</b>                               |
| Max. inrush current impulse                      |  |  |
| Current pulse, input circuit                     | <b>2 A</b>                                 | <b>2 A</b>                                 |
| Pulse duration, input circuit                    | <b>0,1 ms</b>                              | <b>0,1 ms</b>                              |
| Max. overall cable resistance R <sub>I-max</sub> |  |  |
| Single-channel at UB DC                          | <b>30 Ohm</b>                              | <b>30 Ohm</b>                              |
| <b>Relay outputs</b>                             | <b>750111</b>                              | <b>751111</b>                              |
| Number of output contacts                        |  |  |
| Safety contacts (N/O), instantaneous             | <b>8</b>                                   | <b>8</b>                                   |
| Auxiliary contacts (N/C)                         | <b>1</b>                                   | <b>1</b>                                   |
| Max. short circuit current I <sub>K</sub>        | <b>1 kA</b>                                | <b>1 kA</b>                                |
| Utilisation category                             |  |  |
| In accordance with the standard                  | <b>EN 60947-4-1</b>                        | <b>EN 60947-4-1</b>                        |
| Utilisation category of safety contacts          |  |  |
| AC1 at   | <b>240 V</b>                               | <b>240 V</b>                               |
| Min. current                                     | <b>0,01 A</b>                              | <b>0,01 A</b>                              |
| Max. current                                     | <b>6 A</b>                                 | <b>6 A</b>                                 |
| Max. power                                       | <b>1500 VA</b>                             | <b>1500 VA</b>                             |
| DC1 at   | <b>24 V</b>                                | <b>24 V</b>                                |
| Min. current                                     | <b>0,01 A</b>                              | <b>0,01 A</b>                              |
| Max. current                                     | <b>6 A</b>                                 | <b>6 A</b>                                 |
| Max. power                                       | <b>150 W</b>                               | <b>150 W</b>                               |

| <b>Relay outputs</b>                                 | <b>750111</b>                        | <b>751111</b>                        |
|--|--------------------------------------|--------------------------------------|
| Utilisation category of auxiliary contacts           |                                      |                                      |
| AC1 at   | <b>240 V</b>                         | <b>240 V</b>                         |
| Min. current   | <b>0,01 A</b>                        | <b>0,01 A</b>                        |
| Max. current   | <b>6 A</b>                           | <b>6 A</b>                           |
| Max. power   | <b>1500 VA</b>                       | <b>1500 VA</b>                       |
| DC1 at   | <b>24 V</b>                          | <b>24 V</b>                          |
| Min. current   | <b>0,01 A</b>                        | <b>0,01 A</b>                        |
| Max. current   | <b>6 A</b>                           | <b>6 A</b>                           |
| Max. power   | <b>150 W</b>                         | <b>150 W</b>                         |
| Utilisation category                                 |                                      |                                      |
| In accordance with the standard                      | <b>EN 60947-5-1</b>                  | <b>EN 60947-5-1</b>                  |
| Utilisation category of safety contacts              |                                      |                                      |
| AC15 at  | <b>230 V</b>                         | <b>230 V</b>                         |
| Max. current   | <b>5 A</b>                           | <b>5 A</b>                           |
| DC13 (6 cycles/min) at                               | <b>24 V</b>                          | <b>24 V</b>                          |
| Max. current   | <b>5 A</b>                           | <b>5 A</b>                           |
| Utilisation category of auxiliary contacts           |                                      |                                      |
| AC15 at  | <b>230 V</b>                         | <b>230 V</b>                         |
| Max. current   | <b>5 A</b>                           | <b>5 A</b>                           |
| DC13 (6 cycles/min) at                               | <b>24 V</b>                          | <b>24 V</b>                          |
| Max. current   | <b>5 A</b>                           | <b>5 A</b>                           |
| Utilisation category in accordance with UL           |                                      |                                      |
| Voltage  | <b>240 V AC G.U. (same polarity)</b> | <b>240 V AC G.U. (same polarity)</b> |
| With current   | <b>6 A</b>                           | <b>6 A</b>                           |
| Voltage  | <b>24 V DC G. U.</b>                 | <b>24 V DC G. U.</b>                 |
| With current   | <b>6 A</b>                           | <b>6 A</b>                           |
| External contact fuse protection, safety contacts    |                                      |                                      |
| In accordance with the standard                      | <b>EN 60947-5-1</b>                  | <b>EN 60947-5-1</b>                  |
| Max. melting integral                                | <b>260 A<sup>2</sup>s</b>            | <b>260 A<sup>2</sup>s</b>            |
| Blow-out fuse, quick                                 | <b>10 A</b>                          | <b>10 A</b>                          |
| Blow-out fuse, slow                                  | <b>6 A</b>                           | <b>6 A</b>                           |
| Blow-out fuse, gG                                    | <b>10 A</b>                          | <b>10 A</b>                          |
| Circuit breaker 24V AC/DC, characteristic B/C        | <b>6 A</b>                           | <b>6 A</b>                           |
| External contact fuse protection, auxiliary contacts |                                      |                                      |
| Max. melting integral                                | <b>160 A<sup>2</sup>s</b>            | <b>160 A<sup>2</sup>s</b>            |
| Blow-out fuse, quick                                 | <b>10 A</b>                          | <b>10 A</b>                          |
| Blow-out fuse, slow                                  | <b>6 A</b>                           | <b>6 A</b>                           |
| Blow-out fuse, gG                                    | <b>6 A</b>                           | <b>6 A</b>                           |
| Circuit breaker 24 V AC/DC, characteristic B/C       | <b>6 A</b>                           | <b>6 A</b>                           |


| <b>Relay outputs</b>   | <b>750111</b>   | <b>751111</b>   |
|--|---|---|
| Contact material   | <b>AgCuNi + 0,2 µm Au</b>                                     | <b>AgCuNi + 0,2 µm Au</b>                                     |
| <b>Conventional thermal current while loading several contacts</b> | <b>750111</b>   | <b>751111</b>   |
| I <sub>th</sub> per contact at UB DC;<br>AC1: 240 V, DC1: 24 V     |   |   |
| Conv. therm. current with 1 contact                                | <b>6 A</b>  | <b>6 A</b>  |
| Conv. therm. current with 2 contacts                               | <b>6 A</b>  | <b>6 A</b>  |
| Conv. therm. current with 3 contacts                               | <b>6 A</b>  | <b>6 A</b>  |
| Conv. therm. current with 4 contacts                               | <b>6 A</b>  | <b>6 A</b>  |
| Conv. therm. current with 5 contacts                               | <b>6 A</b>  | <b>6 A</b>  |
| Conv. therm. current with 6 contacts                               | <b>5,7 A</b>  | <b>5,7 A</b>  |
| Conv. therm. current with 7 contacts                               | <b>5,3 A</b>  | <b>5,3 A</b>  |
| Conv. therm. current with 8 contacts                               | <b>5 A</b>  | <b>5 A</b>  |
| <b>Times</b>   | <b>750111</b>   | <b>751111</b>   |
| Switch-on delay  |   |   |
| With automatic start after power on typ.                           | <b>30 ms</b>  | <b>30 ms</b>  |
| With automatic start after power on max.                           | <b>50 ms</b>  | <b>50 ms</b>  |
| Delay-on de-energisation   |   |   |
| With E-STOP typ.   | <b>18 ms</b>  | <b>18 ms</b>  |
| With E-STOP max.   | <b>30 ms</b>  | <b>30 ms</b>  |
| With power failure typ.  | <b>18 ms</b>  | <b>18 ms</b>  |
| With power failure max.  | <b>30 ms</b>  | <b>30 ms</b>  |
| <b>Environmental data</b>  | <b>750111</b>   | <b>751111</b>   |
| Climatic suitability   | <b>EN 60068-2-78</b>  | <b>EN 60068-2-78</b>  |
| Ambient temperature  |   |   |
| Temperature range  | <b>-10 - 55 °C</b>  | <b>-10 - 55 °C</b>  |
| Storage temperature  |   |   |
| Temperature range  | <b>-40 - 85 °C</b>  | <b>-40 - 85 °C</b>  |
| Climatic suitability   |   |   |
| Humidity   | <b>93 % r. h. at 40 °C</b>                                    | <b>93 % r. h. at 40 °C</b>                                    |
| Condensation during operation                                      | <b>Not permitted</b>  | <b>Not permitted</b>  |
| EMC  | <b>EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1</b> | <b>EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1</b> |
| Vibration  |   |   |
| In accordance with the standard                                    | <b>EN 60068-2-6</b>   | <b>EN 60068-2-6</b>   |
| Frequency  | <b>10 - 55 Hz</b>   | <b>10 - 55 Hz</b>   |
| Amplitude  | <b>0,35 mm</b>  | <b>0,35 mm</b>  |

| <b>Environmental data</b>   | <b>750111</b>                                 | <b>751111</b>                                |
|---|---|--|
| Airgap creepage   |   |  |
| In accordance with the standard   | <b>EN 60947-1</b>                             | <b>EN 60947-1</b>                            |
| Overvoltage category  | <b>III</b>                                    | <b>III</b>                                   |
| Pollution degree  | <b>2</b>                                      | <b>2</b>                                     |
| Rated insulation voltage  | <b>250 V</b>                                  | <b>250 V</b>                                 |
| Rated impulse withstand voltage   | <b>6 kV</b>                                   | <b>6 kV</b>                                  |
| Protection type   |   |  |
| Housing   | <b>IP40</b>                                   | <b>IP40</b>                                  |
| Terminals   | <b>IP20</b>                                   | <b>IP20</b>                                  |
| Mounting area (e.g. control cabinet)  | <b>IP54</b>                                   | <b>IP54</b>                                  |
| <b>Mechanical data</b>  | <b>750111</b>                                 | <b>751111</b>                                |
| Mounting position   | <b>Any</b>                                    | <b>Any</b>                                   |
| Mechanical life   | <b>10,000,000 cycles</b>                      | <b>10,000,000 cycles</b>                     |
| Material  |   |  |
| Bottom  | <b>PC</b>                                     | <b>PC</b>                                    |
| Front   | <b>PC</b>                                     | <b>PC</b>                                    |
| Top   | <b>PC</b>                                     | <b>PC</b>                                    |
| Connection type   | <b>Screw terminal</b>                         | <b>Spring-loaded terminal</b>                |
| Mounting type   | <b>plug-in</b>                                | <b>plug-in</b>                               |
| Conductor cross section with screw terminals  |   |  |
| 1 core flexible   | <b>0,25 - 2,5 mm<sup>2</sup>, 24 - 12 AWG</b> | –  |
| 2 core with the same cross section, flexible with crimp connectors, no plastic sleeve               | <b>0,25 - 1 mm<sup>2</sup>, 24 - 16 AWG</b>   | –  |
| 2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors | <b>0,2 - 1,5 mm<sup>2</sup>, 24 - 16 AWG</b>  | –  |
| Torque setting with screw terminals   | <b>0,5 Nm</b>                                 | –  |
| Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector         |   |  |
| –   | –   | <b>0,2 - 2,5 mm<sup>2</sup>, 24 - 12 AWG</b> |
| Spring-loaded terminals: Terminal points per connection   |   |  |
| –   | –   | <b>2</b>                                     |
| Stripping length with spring-loaded terminals   |   |  |
| –   | –   | <b>9 mm</b>                                  |
| Dimensions  |   |  |
| Height  | <b>98 mm</b>                                  | <b>100 mm</b>                                |
| Width   | <b>45 mm</b>                                  | <b>45 mm</b>                                 |
| Depth   | <b>120 mm</b>                                 | <b>120 mm</b>                                |
| Weight  | <b>335 g</b>                                  | <b>335 g</b>                                 |

Where standards are undated, the 2017-01 latest editions shall apply.



**Safety characteristic data**




**NOTICE**  
 You must comply with the safety-related characteristic data in order to achieve the required safety level for your plant/machine.

| Operating Mode | EN ISO 13849-1: 2015<br>PL | EN ISO 13849-1: 2015<br>Category | EN 62061<br>SIL CL | EN 62061<br>PFH <sub>D</sub> [1/h] | IEC 61511<br>SIL | IEC 61511<br>PFD | EN ISO 13849-1: 2015<br>T <sub>M</sub> [year] |
|----------------|----------------------------|----------------------------------|--------------------|------------------------------------|------------------|------------------|---|
|----------------|----------------------------|----------------------------------|--------------------|------------------------------------|------------------|------------------|---|

Safety contacts, instantaneous


|             |               |                 |                 |              |                 |           |
|-------------|---------------|-----------------|-----------------|--------------|-----------------|-----------|
| <b>PL e</b> | <b>Cat. 4</b> | <b>SIL CL 3</b> | <b>2,31E-09</b> | <b>SIL 3</b> | <b>2,03E-06</b> | <b>20</b> |
|-------------|---------------|-----------------|-----------------|--------------|-----------------|-----------|

All the units used within a safety function must be considered when calculating the safety characteristic data.



**INFORMATION**  
 A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAscal software tool to calculate the safety function's SIL/PL values.

**Supplementary data**



**CAUTION!**  
 It is essential to consider the relay's service life graphs. The relay outputs' safety-related characteristic data is only valid if the values in the service life graphs are met.

The PFH value depends on the switching frequency and the load on the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

**Service life graph**

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

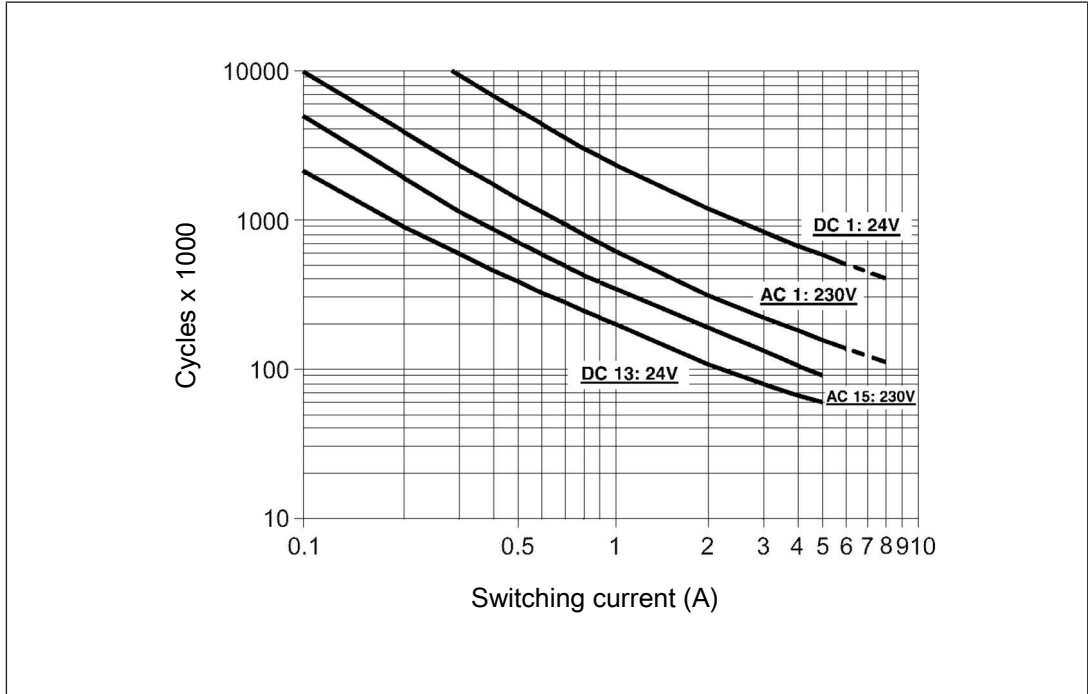


Fig.: Service life graphs at 24 V DC and 230 V AC

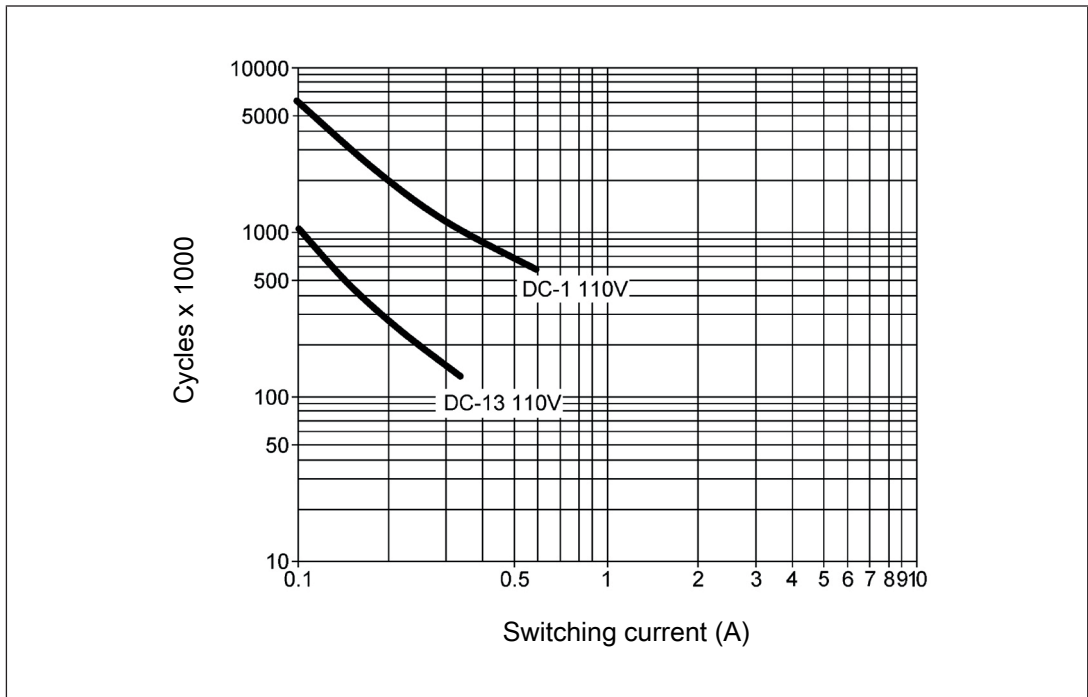


Fig.: Service life graphs at 110 V DC

**Example**

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 2 000 000 cycles

Provided the application to be implemented requires fewer than 2 000 000 cycles, the PFH value (see [Technical details \[13\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all output contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

**Permitted operating height**

The values stated in the technical details apply to the use of the device in operating heights up to max. 2000 m above sea level. When used in greater heights, constraints have to be taken into account:

- ▶ Permitted maximum operating height 5000 m
- ▶ Reduction of rated insulation voltage and rated impulse withstand voltage for applications with safe separation:

| Maximum operation height | Rated insulation voltage | Overvoltage category | Max. rated impulse withstand voltage |
|--------------------------|--------------------------|----------------------|--------------------------------------|
| 3000 m                   | 150 V                    | II                   | 2.5 kV                               |
|                          | 100 V                    | III                  | 2.5 kV                               |
| 4000 m                   | 150 V                    | II                   | 2.5 kV                               |
|                          | 100 V                    | III                  | 2.5 kV                               |
| 5000 m                   | 150 V                    | II                   | 2.5 kV                               |
|                          | 100 V                    | III                  | 2.5 kV                               |

- ▶ Reduction of rated insulation voltage and rated impulse withstand voltage for applications with basic insulation:

| Maximum operation height | Rated insulation voltage | Overvoltage category | Max. rated impulse withstand voltage |
|--------------------------|--------------------------|----------------------|--------------------------------------|
| 3000 m                   | 250 V                    | II                   | 2.5 kV                               |
|                          | 150 V                    | III                  | 2.5 kV                               |
| 4000 m                   | 250 V                    | II                   | 2.5 kV                               |
|                          | 150 V                    | III                  | 2.5 kV                               |
| 5000 m                   | 250 V                    | II                   | 2.5 kV                               |
|                          | 150 V                    | III                  | 2.5 kV                               |


- ▶ From an operating height of 2000 m the max. permitted ambient temperature is reduced by 0.5 °C/100 m

| Operating height | Permitted ambient temperature |
|------------------|-------------------------------|
| 3000 m           | 50 °C                         |
| 4000 m           | 45 °C                         |
| 5000 m           | 40 °C                         |

### Remove plug-in terminals

Procedure: Insert the screwdriver into the housing recess behind the terminal and lever the terminal out.

Do **not** remove the terminals by pulling the cables!

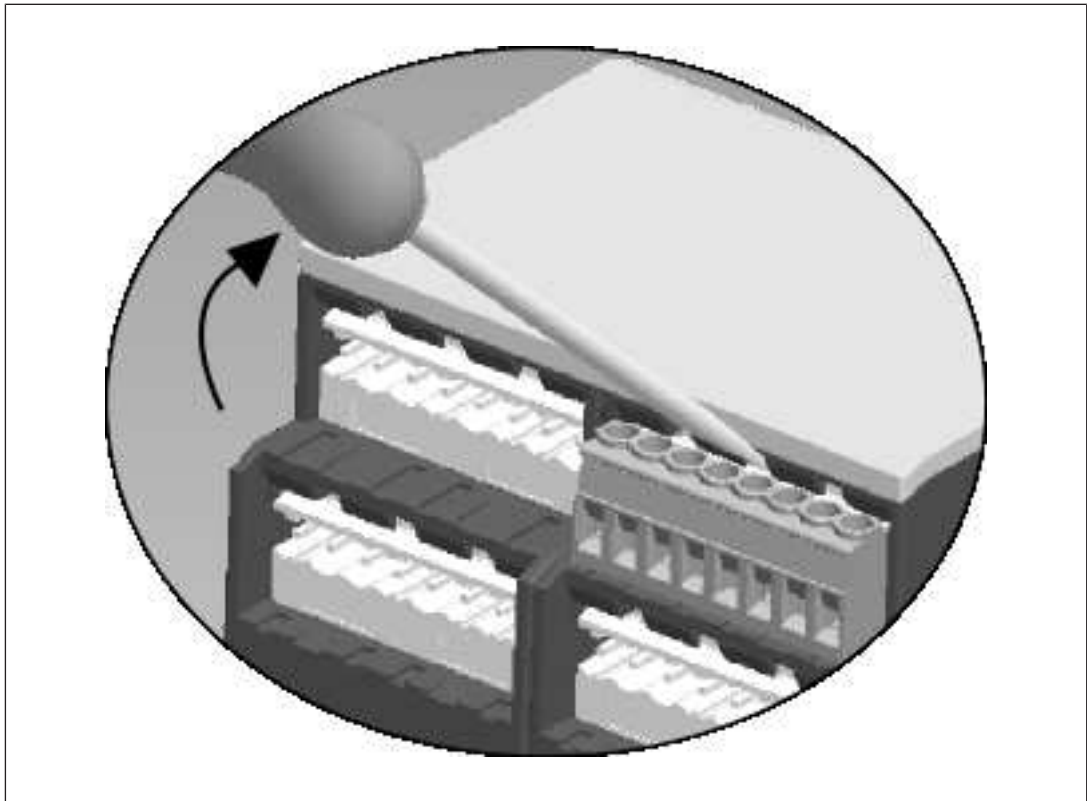

### Order reference

| Product type | Features | Terminals               | Order No. |
|--------------|----------|-------------------------|-----------|
| PNOZ s11     | 24 VDC   | Screw terminals         | 750 111   |
| PNOZ s11 C   | 24 VDC   | Spring-loaded terminals | 751 111   |

### **EC declaration of conformity**

This product/these products meet the requirements of the directive 2006/42/EC for machinery of the European Parliament and of the Council. The complete EC Declaration of Conformity is available on the Internet at [www.pilz.com/downloads](http://www.pilz.com/downloads).

Representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany

# ► Support

Technical support is available from Pilz round the clock.

## Americas

### Brazil

+55 11 97569-2804

### Canada

+1 888-315-PILZ (315-7459)

### Mexico

+52 55 5572 1300

### USA (toll-free)

+1 877-PILZUSA (745-9872)

## Asia

### China

+86 21 60880878-216

### Japan

+81 45 471-2281

### South Korea

+82 31 450 0680

## Australia

+61 3 95600621

## Europe

### Austria

+43 1 7986263-0

### Belgium, Luxembourg

+32 9 3217575

### France

+33 3 88104000

### Germany

+49 711 3409-444

### Ireland

+353 21 4804983

### Italy, Malta

+39 0362 1826711

## Scandinavia

+45 74436332

## Spain

+34 938497433

## Switzerland

+41 62 88979-30

## The Netherlands

+31 347 320477

## Turkey

+90 216 5775552

## United Kingdom

+44 1536 462203

## You can reach our international hotline on:

+49 711 3409-444

support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.



CMSE®, IndurANET p®, PAS4000®, PASscal®, PASconfig®, Pilz®, PIT®, PLID®, PMCPirotego®, PMCiendo®, PMD®, PMi®, PNOZ®, Pirmo®, PSEN®, PSS®, PVS®, SafetyBUS SafetyEYE®, SafetyNET p®, THE SPIRIT OF SAFETY® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries. We would point out that product features mentioned in the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.

21693-EN-10, 2017-06 Printed in Germany  
© Pilz GmbH & Co. KG, 2015

Pilz GmbH & Co. KG  
Felix-Wankel-Straße 2  
73760 Ostfildern, Germany  
Tel.: +49 711 3409-0  
Fax: +49 711 3409-133  
info@pilz.com  
www.pilz.com

**PILZ**  
THE SPIRIT OF SAFETY